

# Teachin'Bot

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Teachin' Bot is an interactive educational toy designed for children aged 3 years of age and above. It can help your children recognize numbers and shapes, as well as developing their listening skills.


## INSTALLING BATTERIES

Your Robot requires 3 AA batteries (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

### Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

1. Use a Phillips screwdriver to loosen the screw on the battery compartment cover, then lift it off.
2. Place the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
3. Replace the cover and tighten the screw to secure it.

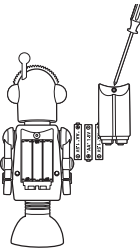









When the Robot's voice weakens or it stops operating properly, replace the batteries.

**Warning:** Dispose of old batteries promptly and properly. Do not burn or bury them.

**Caution:** If you do not plan to use the Robot for a week or more, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

**Note:** In order to save power, the Robot automatically turns off if you don't press any buttons for about 5 minutes.

## ACTIVITIES

Activity	Description
 Young Scholar	Press a button and the Robot tells you what number it is.
 Shape Quiz	Find the shape.
 Number Quiz	Match the correct number with its name.
 I.Q. Developer	Answer the Robot's question to find the correct number.
 Color Detective	Press the correct colored button to answer the question.
 Melody Central	Compose your own melody.
 Mystery Number	Follow the Robot's cues to find the mystery number.
 Spelling Bear	Press the button for the number the Robot spells.




**RadioShack®**

www.radioshack.com™



© 2001 RadioShack Corporation. All Rights Reserved.  
RadioShack and RadioShack.com are trademarks  
used by RadioShack Corporation.

## PLAYING WITH YOUR ROBOT

1. Press the robot's right hand to turn it on. A melody sounds.
2. Repeatedly press the robot's antenna to select the desired activity. A melody sounds, your Robot asks you a question, and its crown flashes.
3. Press a button to answer the question.  
*If the answer is correct, the Robot proceeds to the next question.*  
*If you don't press a button, the Robot repeats the question until you answer.*  
*If you enter the wrong answer, the Robot asks you to enter another answer.*
4. To hear the question again, press .
5. To switch to another activity, press the robot's antenna at any time.
6. To turn off the Robot, press its right hand. The Robot announces, "If you really want to leave now, press my right hand again."

Press its right hand again. It announces, "I'll be back," then plays a melody and shuts off.

### Notes:

- In *Melody Central*, press 8, 9, or 10 to hear the preset melodies. Press  to hear all three preset melodies, or  to hear the spiralling down sound.
- In *Mystery Number*, the Robot gives you a hint every time you get the wrong answer.
- In *Spelling Bear*, you have three chances to answer each question. If you do not answer correctly by the third try, the Robot tells you the answer.

## CARE

Keep your Robot dry; if it gets wet, wipe it dry immediately. Use and store your Robot only in normal temperature environments. Handle the Robot carefully; do not drop it. Keep your Robot away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with your Robot's internal components can cause a malfunction and invalidate its warranty. If your Robot is not performing as it should, take it to your local RadioShack store for assistance.

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, crash, collision, impact, violent contact, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

12/99

RadioShack Corporation  
Fort Worth, Texas 76102

60-2621  
05A01  
Printed in Hong Kong